



Safety & Warranty Guide

RDI Digital Display Inclinometers

IMPORTANT SAFETY AND WARRANTY INFORMATION



This symbol identifies safety and health messages in this Product Guide and other product manuals.

Read this guide for important safety and health information for the device that you have purchased.



WARNING: Failure to properly set up, use, and care for this product can increase the risk of serious injury or death, or damage to the device or equipment. Read this guide and keep all printed guides for future reference. For replacement guides, go to:

www.riekerinc.com/E-Inclinometers/Technical-Documents.htm.

By using the Rieker RDI Digital Display device or accessories, you agree to be bound by Rieker Inc warranty and terms & Conditions www.riekerinc.com/Terms-Conditions.htm. Please read them. If you do not accept them, do not use your Rieker device or accessories.

ONE YEAR WARRANTY: Rieker Inc. will guarantee its products from defects in material and workmanship for a period of one (1) year from date of shipment. The manufacturer of this quality instrument warrants that if it is determined this instrument has failed, within twelve months of the date of shipment, due to defect in material or workmanship, Rieker Inc. agrees at its option to repair the item, or to furnish a new unit in exchange for the defective item. No additional warranty is implied beyond repair or replacement of unit. Warranty is void if the item has been altered, modified, abused and/or mishandled by the customer in any manner. **IN NO EVENT WILL THE COMPANY BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES OF ANY KIND.**



WARNING: Do Not Attempt Repairs

Do not attempt to take apart, open, service, or modify the product, accessories, or power supply. Doing so could present the risk of electric shock or other hazard. Any evidence of any attempt to open and/ or modify this device, including any peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.



WARNING: Battery Safety

This device may contain a battery, improper use of which may result in fire or explosion. To reduce the risk of fire or explosion, do not heat, open, puncture, mutilate, or dispose of the product in fire.

Do not leave the device in direct sunlight, such as on the dash of a car in the summer, for an extended period of time. If the device uses rechargeable batteries, do not recharge your device near a fire or in extremely hot conditions.



WARNING: Outdoor and Wet Conditions

The Rieker RDI LCD device is rugged and dust tight - it is NOT waterproof and is not impervious to water damage in wet environments. To avoid damaging this device, do not submerge it or expose it to excessive rain or moisture. To reduce the risk of fire or shock, do not attempt to change batteries in rain or excessive moisture conditions.

The information and material presented may not be published, broadcast, rewritten, or redistributed without the expressed written consent of Rieker[®] Inc. The content presented is provided for informational purposes only and subject to change.
©2017 Rieker[®] Inc. All Rights Reserved.
FORM NUMBER: RK0057_05/17 UPDATED: 5/12/17

Rieker Rugged. Rieker Reliable.™

RIEKER INC • 34 MOUNT PLEASANT ROAD • ASTON • PA • 19014 • USA

610-500-2000

fax: 610-500-2002

support@riekerinc.com

www.riekerinc.com



WARNING: Proper Storage - Extreme Environmental Conditions

Only store your Rieker LCD device in a clean, dry environment. Do not store your Rieker RDI device where the ambient temperature is above 158°F (70°C) or below -40°F (-40°C). Do not store your Rieker device where it is exposed to strong electromagnetic fields or where it may be exposed to direct electrical current. Using or storing the Rieker RDI device in an environment where the external temperature varies widely and quickly might damage the LCD. When moved to a location with a temperature difference of 20°F (11°C) or more from the previous location, allow the device to come to room temperature before turning it on.



WARNING: Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders. The Rieker RDI device is not rated for hazardous locations. When you are in such an area, turn off the device, and do not remove or install battery chargers, AC adapters, or any other accessory. In such areas, sparks can occur and cause an explosion or fire.



CAUTION:

This RDI has been manufactured to allow for trip angle adjustment. Purchaser assumes the responsibility of ensuring that the settings are appropriate for their specific application. **IN NO EVENT WILL RIEKER BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES OF ANY KIND.**



CALIBRATION NOTES:

This instrument has been calibrated to perform to precise specifications. Any tampering or reconfiguration of this instrument may change the properties of the product, and will therefore void the warranty. All sensors are sealed. If the seal is broken the calibration and warranty is void.

REGULATORY INFORMATION

- The Rieker RDI LCD device is NOT intended for use in hazardous locations, underwater or all-weather conditions.
- Any changes or modifications not expressly approved by Rieker will void the warranty, may alter the factory calibration and/or cause the device to malfunction or fail.
- This device is rated as a commercial product for operation at -4°F (-20°C) to +158°F (+70°C).

PRODUCT DISPOSAL INFORMATION

Disposal of Waste Batteries and Electrical & Electronic Equipment



This symbol if on the product or its batteries or its packaging means that this product and any batteries it contains must not be disposed of with your household waste. Instead, it is your responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment. For more information about where to drop off your batteries and electrical and electronic waste, please contact your local city/municipality office, or your waste disposal service.

Rieker Rugged. Rieker Reliable.™

RIEKER INC • 34 MOUNT PLEASANT ROAD • ASTON • PA • 19014 • USA

610-500-2000

fax: 610-500-2002

support@riekerinc.com

www.riekerinc.com



Safety & Warranty Guide

RDI Digital Display Inclinometers

Page 3 of 3

COPYRIGHT

Information and views expressed in this document, including URL and other Internet Web site references, may change without notice.

This document does not provide you with any legal rights to any intellectual property in any Rieker product. You may copy and use this document for your internal, reference purposes.

© 2017 Rieker Inc.

CUSTOMER SUPPORT

For Customer Support contact information, visit: www.riekerinc.com/ContactInformation.htm

The information and material presented may not be published, broadcast, rewritten, or redistributed without the expressed written consent of Rieker® Inc.
The content presented is provided for informational purposes only and subject to change.
©2017 Rieker® Inc. All Rights Reserved.
FORM NUMBER: RK0057_05/17 UPDATED: 5/12/17

Rieker Rugged. Rieker Reliable.™

RIEKER INC • 34 MOUNT PLEASANT ROAD • ASTON • PA • 19014 • USA

610-500-2000

fax: 610-500-2002

support@riekerinc.com

www.riekerinc.com